



Mounting Instructions
Wolfman E-10 Enduro Saddle bags
Including our new “Tension-O-Matic” pat.pend.
Rear mounting system


*READ THOROUGHLY BEFORE MOUNTING BAGS TO MOTORCYCLE

*Helpful Hint: Stuff each bag with a sleeping bag or quilt to give it body.

*For best results take a test ride before putting your E-10 Saddlebags to use.

*Mounting is the same for both sides.

A Properly mounted pair of E-10 Saddle Bags. Figure-1

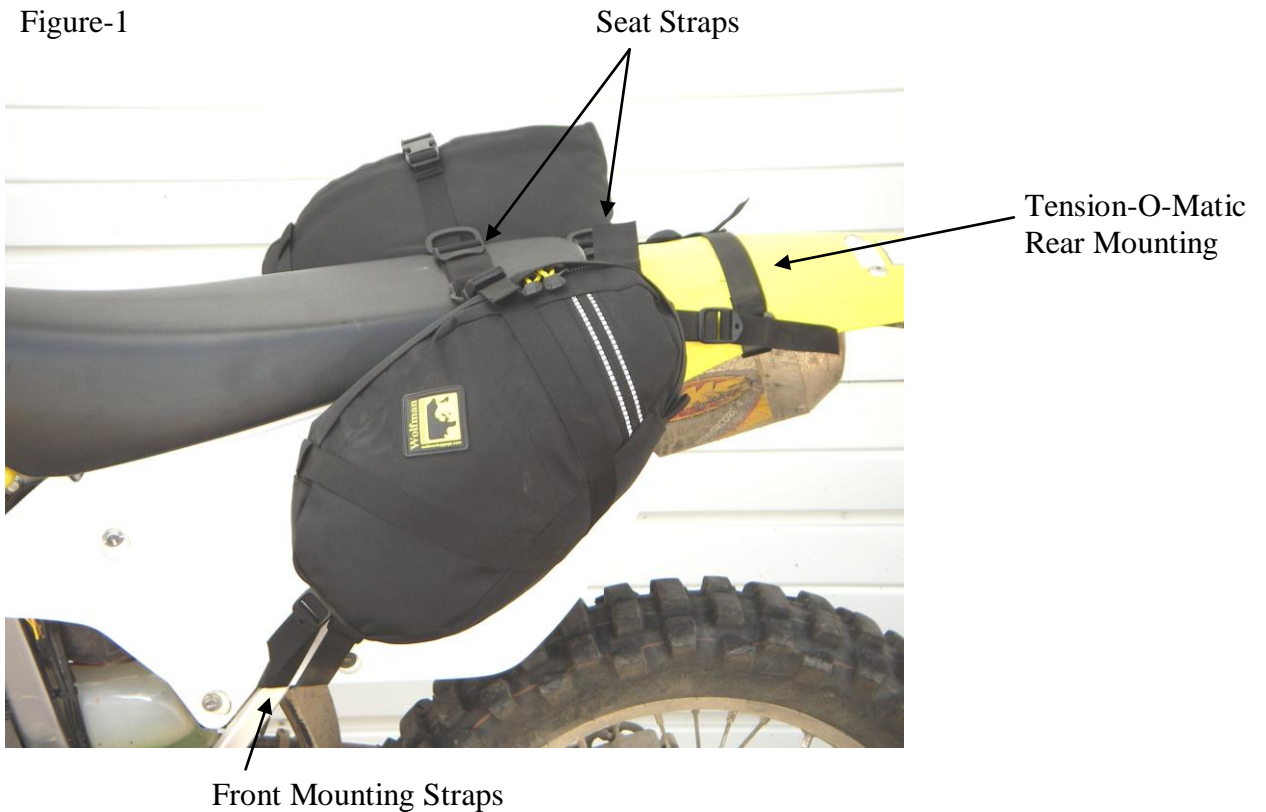

Step-1 Place the E-10 Saddlebags over the seat as shown.
Place the Rear Seat Strap on the rear fender just past the end of the seat. Figure-2
Adjust the straps between the bags so the top seam of each bag is equal to the top of the seat. Figure-2

Figure-2



The “Tension-O-Matic” Super lock down rear mounting.
Side view of the Tension-O-Matic rear mounting. Figure-3

Figure-3



Step-2

Spread the Gutter Hooks of the Tension-O-Matic mounting across the rear fender so the Gutter Hooks catch the bottom lip on each side of the rear fender. Figure-4

Figure-4



Step-3

Pull each Tension-O-Matic strap away from the rear fender to tension the straps.

Figure-5 (Direction of Arrows)



Step-4

Tighten the bags to the Tension-O-Matic straps. Figure-6

Figure-6




Step-5

The front mounting straps on each bag thread around the sub frame side tubes, below the side panels. Thread the webbing behind the sub frame from the bottom and out the top. On the Exhaust side **be very careful**. (Yes, the webbing can be close to the exhaust header, the pipe can be very Hot.) We have designed the front straps so they can be replaced if they get melted. Left Side Figure-7&8 Right Side Figure-9&10

Left Side
Figure-7



Figure-8

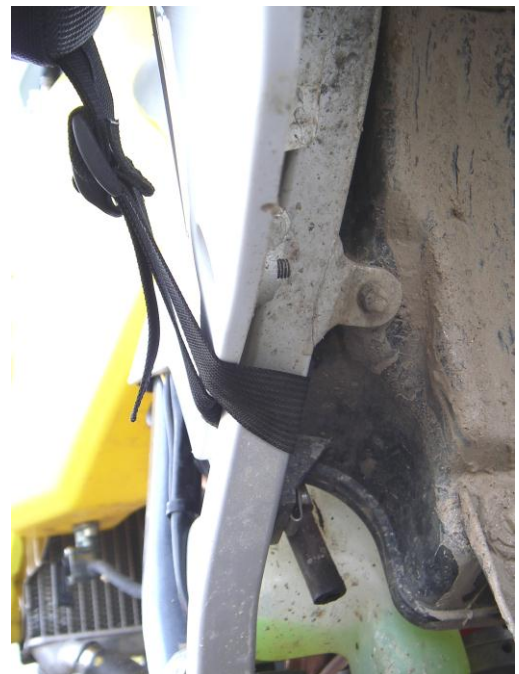

Right Side
Figure-9

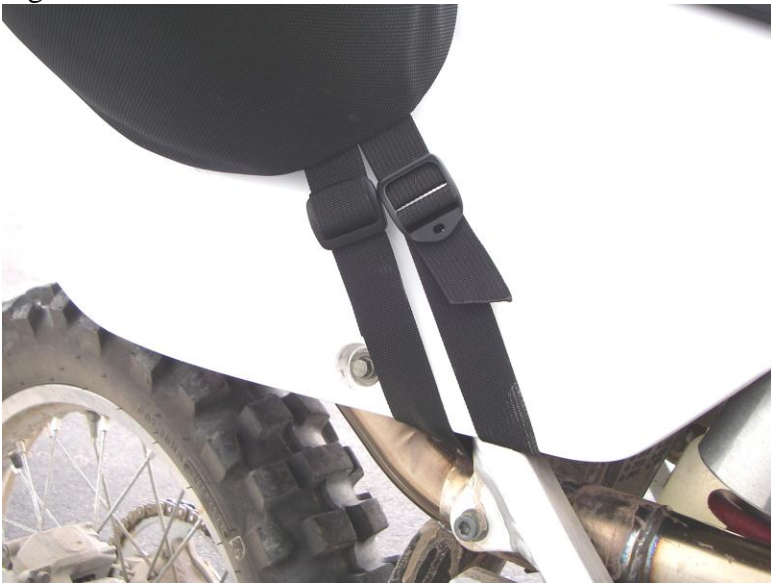


Figure-10



Step-6

Once all the straps are mounted the E-10 Saddles should look like. Figure-1

****Tighten all straps snug.**

Helpful hints:

During a ride check the straps tension every so often.

Put most of your heavy items on the non-exhaust side. (This is to make sure the bags does not flex the side panel onto the exhaust pipe.)

-ONLY The front mount straps and Tension-O-Matic webbing straps are made extra long. You can cut to length, leave about 4" of tail and sear edge with a lighter. If you make a mistake-no worries they are replaceable.

****The seat straps are NOT replaceable.**

-Use the "V" Compression straps to secure the contents.

-Before riding, do yourself a favor and make a dry run with the bags on.

****Make sure the straps are tight and snug.**

-If these instructions do not make sense, no worries, give us a call at 800/535-8131. We are here to help.

Enjoy,
Wolfman

