



Mounting Instructions “WOLFMAN RACKS” 2010 Wolfman Expedition Dry Saddlebags or Teton Saddlebags to the Wolfman and Backroads Moto Side Racks.

For mounting to the Wolfman and Backroads Moto Side Racks

Thank You for purchasing our new 2010 Wolfman Products

***READ THOROUGHLY BEFORE ATTACHING BAGS TO RACKS**

*For best results take a test ride before putting your saddlebag into use.

*Helpful Hint, before you begin: Stuff each bag with a sleeping bag or quilt to give it body.

*The mounting is the same for both left and right bags.

A Properly mounted pair of bags.

Figure-1 Right Side



Figure-2 Left Side



Orientation

Figure-3. Please note the various parts of the Saddlebag. Since the Left and Right bags are identical only one is shown. (Yellow is used as it is easier to see all the webbing.)

Figure-3


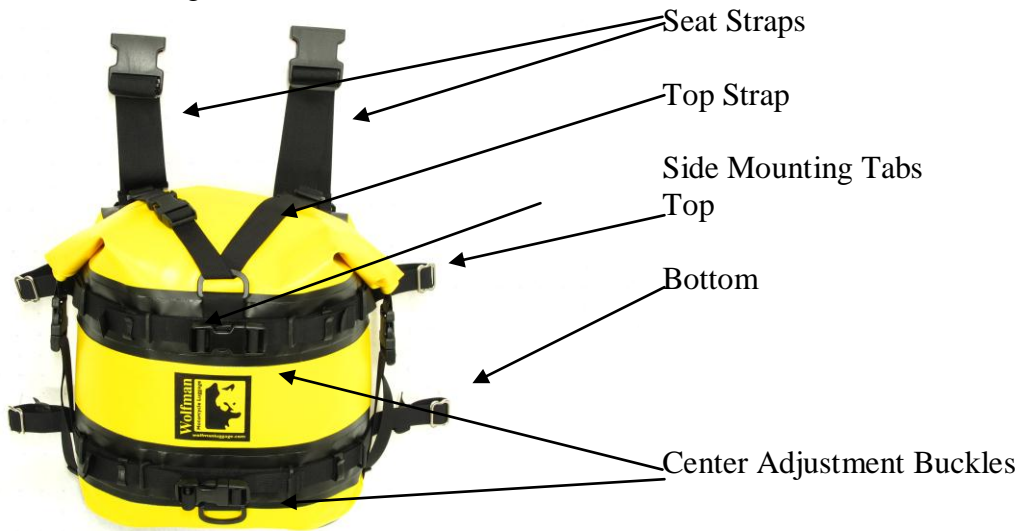


Figure-4. Please note the four rectangular slots around the perimeter of the hoop. Since the Left and Right hoops are the same only one is shown.

Figure-4

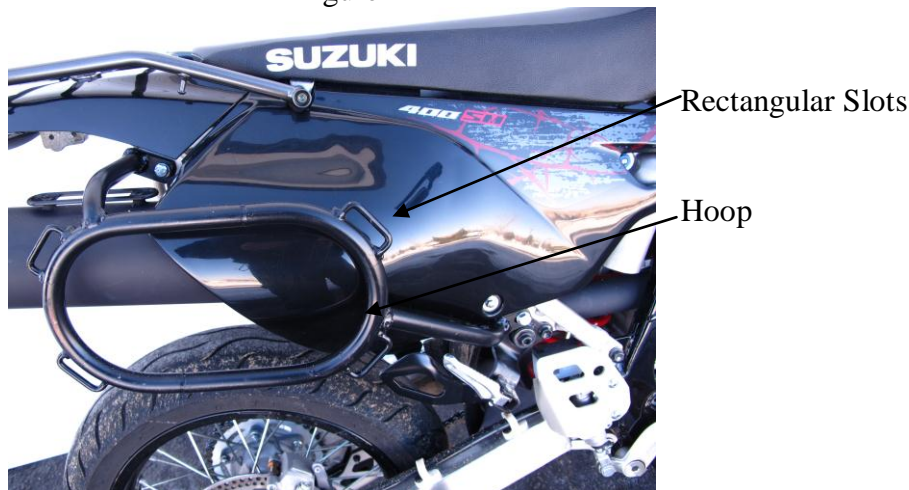

Unclip the center adjustment buckles on the upper and lower mounting patches and loosen the webbing.

Figure-5



Figure-5

Mounting Saddle Bags to Rack

Step-1 Place bags over the seat and or rear rack. Depending on the width of your motorcycle, you may need to adjust the height of each bag. Do this by adjusting the 2” seat strap webbing from the large center buckles. Adjust so that the side racks are centered between the upper mounts and lower mounts on the bags.

Figure-6 This is a rear view of a properly adjusted set of saddlebags.



Step-2 Begin with the lower mounting **tabs** front and rear. Insert the metal tab at the end of the webbing through the rectangular slot at the bottom rack. Pull webbing so the metal tab catches on both sides of the opening and cannot slip through. Do this on both front and rear slots on the side rack.

Figure-7

Figure-8




Step-3 Fasten the upper tabs the same way you did in Step-2.

Figure-9



Figure-10.

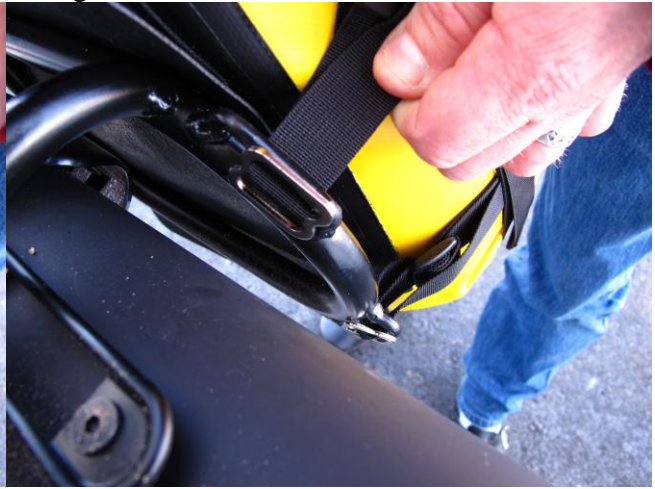

Step-4 Refasten the center adjustment buckle on the front of each bag Figure-11; and tighten the straps Figure-12.

Figure-11 Fasten Center Adjustment Buckle



Figure-12 Tighten Straps to compress bag to Rack



Step-5 Thread Excess Webbing through Plastic Loop and Strap Keeper, Do this for all excess webbing; 4 per bag.



Plastic Loop and Strap Keeper

Step-6 Tighten the wide seat strap webbing using the large buckles. You can pull both ends to tighten the webbing. Figure-13.

Figure-13




Always use the seat straps. The bags and racks are designed for these as the seat straps distribute the weight of the bag. Failure to use the seat straps can result in damage to the bags, motorcycle and bodily harm. This will also void any and all warranties.

Loading the bags. You can load the bags either on or off the bike. The bags can be taken off one at a time or as a set. Loading and unloading the bags while on the racks: You will have to unclip the upper and lower center adjustment buckles to loosen the compression of the bag; doing this will make the contents slip in and out much easier.

When closing roll the bags down and “**burp**” to let as much air escape as possible. Re-roll with a minimum of 3 rolls to create a tight seal. Fasten the side straps. Pass the top compression strap through the upper 1 ½” D-Ring and fasten to the top clip. Figure-15.

Figure-15

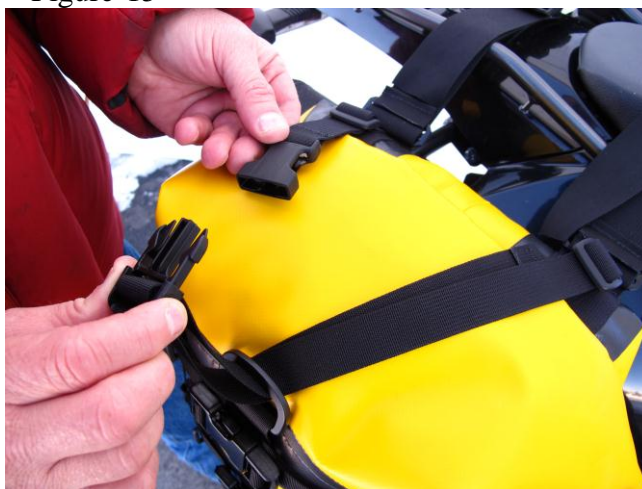

For maximum safety you MUST retighten all the mounting webbing on the upper and lower webbing tabs.

To remove the bags:

To remove one bag at a time:

Step-7 Unclip the center adjustment buckles on the outside of each bag. This will release the tension on the metal tabs secured to the rack. With your thumbs simply **flick** the Metal tab through the rectangle slot. Do the lower tabs first then the upper tabs. Figure-16.

Figure-16



On the exhaust side, be careful not to touch the exhaust as you can be burned!!!

Step-8 Grab the bag by top compression strap and unfasten the center buckles on the 2" seat straps. Figure-17.

Figure-17



Step-9 To remove the other side repeat Step-7 and Step-8.

If you want to remove both bags at once, Follow Step-6 and Step-8 and use the seat straps as a handle.
Figure-18

Figure-18



Note: All of the Mounting straps on the Wolfman Expedition Dry Saddlebags and Tetons are removable and replaceable. Extra mounting kits can be purchased from us.

MAXIMUM WEIGHT LIMIT: 13lbs (5.9 kg) per bag.

If you have any questions about the Mounting of the Wolfman Expedition Dry Saddlebags or The Teton Saddlebags to the Wolfman and Backroads Moto Side Racks, please call us. 800/535-8131.

Enjoy.