

Mounting Instructions for mounting 2010 Wolfman and Backroads Moto Side Racks

Honda XR650L

This kit contains the following:

Quantity	Description
1	Left rack
1	Right rack
1	8mmx50mm Hex Head
1	8mmx20mm Hex Head
4	8mmx25mm Hex Head
1	6mmx60mm Hex Head
1	6mm Nut
12	8mm Washers (small)
2	6mm Washers (large)

Tools needed

BLUE or a Medium Strength Loctite or thread locker

13mm end wrench

13mm socket and ratchet

12mm socket or wrench

10mm socket or wrench

8mm socket or wrench

These Racks are intended to be used only with the Wolfman Expedition Dry Saddlebags and Teton Saddlebags.

Read and understand these instructions before touching your bike, rack or a wrench

Be Sure To Loctite All Bolt's

Right side rack

1. Remove passenger peg, 6mm bolt that holds turn signal and 8mm bolt that holds fender support to subframe.
2. Apply loctite to the one 8mmx20mm Hex Head bolt, and with a washer place bolt through upper mount tab of rack and into subframe from underside of fender. DO NOT TIGHTEN AT THIS TIME. (See Fig 1)
3. Insert 6mmx60mm Hex bolt with washer through rack mount tab at turn signal mounting point, Place 6mm washer and nut on back side. DO NOT TIGHTEN AT THIS TIME. (See Fig 2)



FIG 1



FIG 2

4. Apply loctite to two 8mmx25mm hex bolts with washers, place through passenger peg and lower rack mount tab into subframe. See Fig 3
5. Tighten all bolts on RT side.

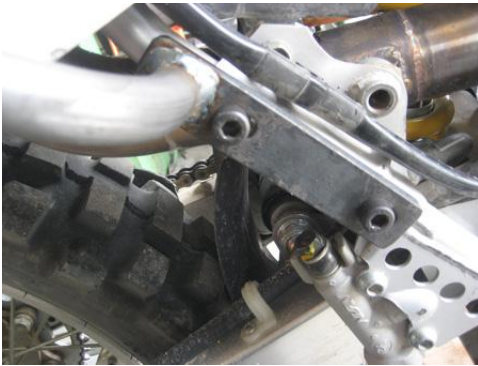


FIG 3

Left side rack

1. Remove passenger peg and upper battery box mounting bolt.
2. Apply loctite to one 8mmx50mm hex bolt with washer. Place bolt through upper mount tab of rack and into upper battery box mount hole. **DO NOT TIGHTEN AT THIS TIME.** (See Fig 4)
3. Apply loctite to two 8mmx25mm hex bolts with washers, place through passenger peg and lower rack mount tab into subframe. (See Fig 5)
4. Tighten all bolts on LT side.



FIG 4



FIG 5

If you have any questions call or email Berg Briggs at:
1-307-690-0452
berg@brmoto.com