

Mounting Instructions for 2010 Wolfman and Backroads Moto Side Racks

KTM 690

This kit contains the following:

Quantity	Description
1	Left rack
1	Right rack
4	8mm x 30mm socket head
4	8mm x 65mm socket head
8	8mm washer (small)
4	5/8 x .880 spacers
4	3/4 x 1/2 spacers (Use in place of passenger pegs if pegs are not used) See Fig 4

Luggage Racks Must Be Installed With Top Luggage Plate

These Racks Are Designed To Work with the Stock Tail Light Assembly if You have a Tail Tidy You will Need Longer Spacers

Tools needed

BLUE or a Medium Strength Locktight or thread locker

6mm nut driver or socket

10mm socket

8mm socket

6mm hex wrench

3/4 drill bit or step drill

Drill

These Racks are intended to be used only with the Wolfman Expedition Dry Saddlebags and Teton Saddlebags.

Read and understand these instructions before touching your bike, rack or a wrench

Be Sure To Locktight All Bolt's

1. Remove Right & Left passenger pegs.
2. Remove rear fender, turn over and drill out the four dimples in the under side to 3/4 so that the four mounting holes are accessible.
3. Reinstall rear fender.
4. Place four 5/8 x .880 spacer in the holes. See Fig 1

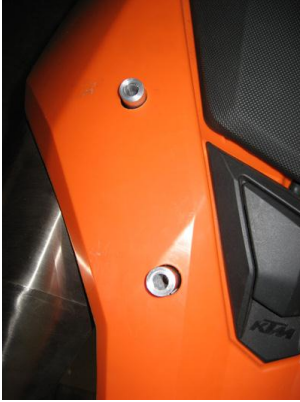


FIG 1

Right side rack

1. Apply locktight to two 8mmx30mm socket head bolts and washer. Place one through top lower rack mount hole and one in upper passenger peg mount hole and start, leave loose.
2. Place 2nd 8mm x 30mm socket head bolt in lower mount hole and start, leave loose. See Fig 2

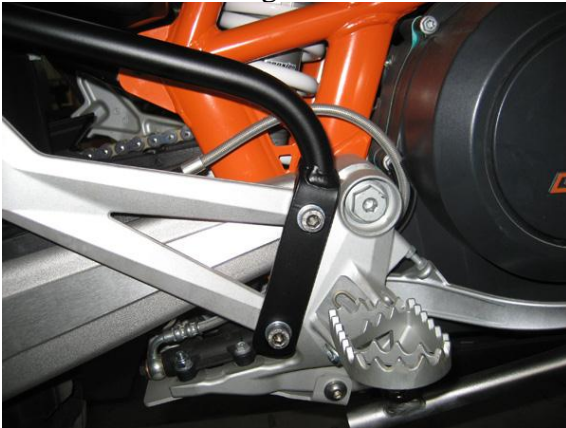


FIG 2

***** THIS KIT IS DESIGNED TO WORK WITH A TOP PLAT OF 1/8 - 3/16 THICK AT MOUNTING HOLES IF YOU HAVE A DIFFERENT THICKNESS YOU WILL NEED DIFFERENT LENGTH BOLTS.

3. Apply locktight to two 8mm x 65mm socket head bolts and washers, place bolts through rack top mount holes then through top luggage plate, thread in. See Fig 3



Fig 3

4. Tighten all bolts.

Left side rack

1. Apply locktight to two 8mm x 30mm socket head bolts and washer, Place one through top lower rack mount hole and upper passenger peg mount hole and start, leave loose.
2. Place 2nd 8mm x 30mm socket head bolt in lower mount hole and start, leave loose. See Fig 2
3. Apply locktight to two 8mmx65mm socket head bolts and washers, place bolts through rack top mount holes then through top luggage plate, thread in. See Fig 3
4. Tighten all bolts.



FIG 4

If you have any questions call or email Berg Briggs at:
1-307-690-0452
berg@brmoto.com