

Mounting Instructions for mounting Wolfman and Backroads Moto  
Top Rack  
Triumph 800 / XC Top Rack  
Part # RTR14

This kit contains the following:

| Quantity | Description           |
|----------|-----------------------|
| 1        | Top Rack Part # RTR14 |
| 4        | 6mm x 1.0 x 40mm      |
| 4        | 5/8 x 7/8 Spacer      |

**Tools needed**

BLUE or a Medium Strength Locktite or thread locker

4mm Hex wrench

8mm wrench or socket

Read and understand these instructions Prior to installation!

**Be Sure To Locktite All Bolt's**

1. Remove four 6mm bolts mounting OEM plastic cover behind pillion seat, leaving plastic cover in place. See Fig 1



FIG 1

2. Place Top Rack and mounting hardware into position on motorcycle. See Fig 2

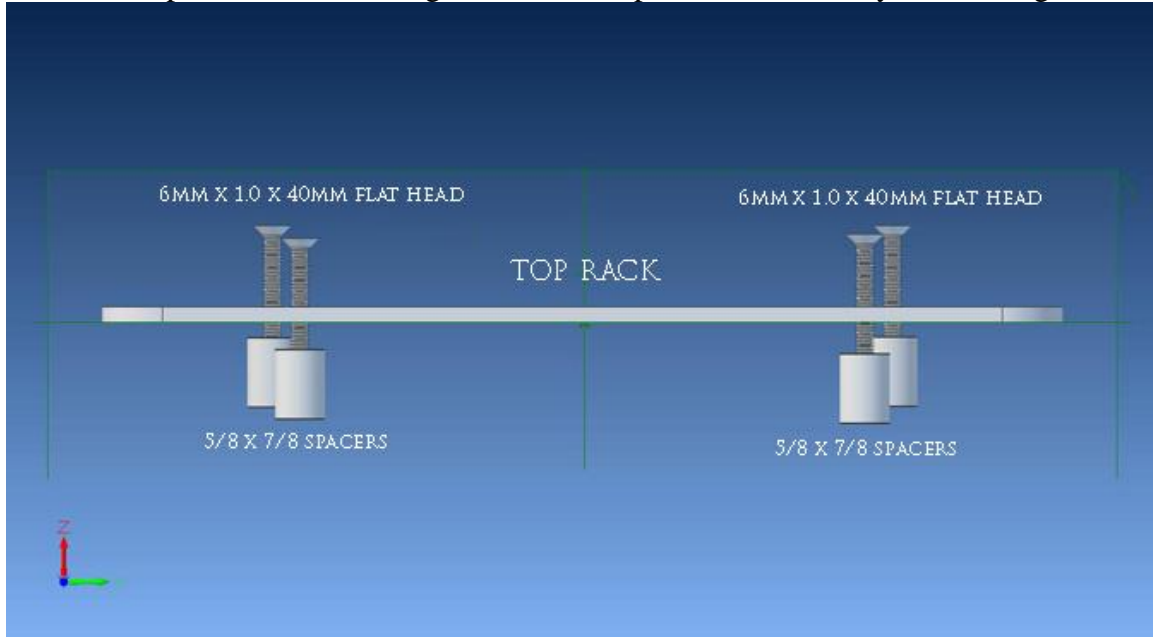


FIG 2

3. Tighten all four 6mm flat head bolts to factory specifications.

**\*\*Periodically Re-check all Nuts and Bolts to make sure they are tight, and the Side Racks are not loose\*\***

If you have any questions call or email Berg Briggs at:  
1-307-690-0452  
berg@brmoto.com