



Wolfman Mounting guidelines for the Small, and Medium, and Large Rolie Bag to Sloped Tank mount. You can now use your Rolie Bag as Over the Tank Storage.

Rolie Bag Tank Storage on Sloped Tank. Fig.1&Fig.2

Fig.1



Fig.2




You will need:

Tank Mount:

Small Rolie Bag

Medium Rolie Bag

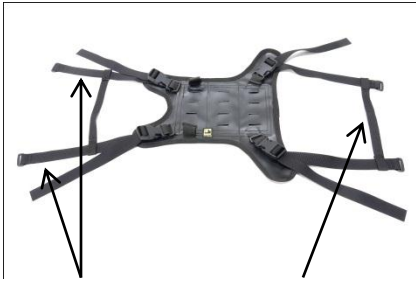

Mounting Straps

Keeper



Small Map Pocket



Large Map Pocket



Large Rolie Bag



****Please read and understand these instructions before touching your bike, rack or wrench.****

*****Make sure your Gas Tank and Rolie Bag Tank Mount are free of Dirt. *****

1. To Start you will need to "Patch Thread" your Rolie Bag.

"Patch Thread" Setting up The Small or Medium Rolie bag.

Tools Needed:
Long Screwdriver, Chop Stick, or long tool.

Your Small or Medium Rolie bag comes with two Seat Straps.
These will be **"Patch Threaded"** Fig.a




Fig.a

1. Remove the Flappy strap keepers as they will not be used at all.
2. Insert raw end of the Seat Strap Webbing into the slot on the patch welded to the bag, on the underside of the buckles.

Fig.b Small Rolie



Fig.c Medium Rolie

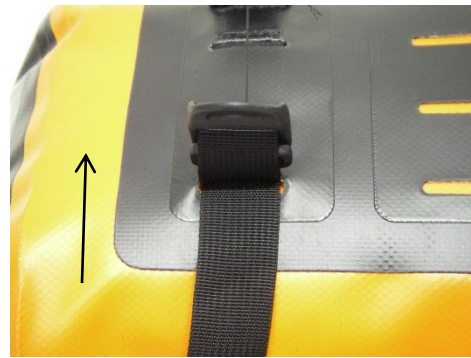

4. The Medium Fig. c
5. Center webbing, the loop will stick out about 1/2" on each side.
6. Your bag is now **"Patch Threaded"**.

1. Set Tank Mount on tank with the front tabs around the gas cap. Fig.3

Fig.3



2. Unfasten the front harness. Separate the buckles from the webbing.

3. Locate a frame tube, radiator, tank mount, etc. near the Steering head Tube.
4. Thread the RAW/Cut end of the strap around the Location and through the Rectangle Buckle. Pull tight to secure to the bike. Fig.4

Fig.4



5. Thread the Mounting Straps through the Keeper and through the Male Buckles.
6. Repeat for the other side.
7. Clip to the tank mount.

Alternative Method.

7. Unfasten the front harness. Separate the buckles from the webbing. You can use one strap or if it is not long enough, Combine webbing by Threading one strap through the other. Fig.7

Fig.7



Fig.8



8. Thread the new long strap under the frame behind the steering tube. Fig.8
9. Thread the RAW/Cut ends through the Keeper and Through the Male Buckles. Fig.9

Fig.9



Fig.10



10. Clip Front Harness to Tank Mount. Fig.10

Mounting Rear Harness.

11. Unfasten the Rear harness. Separate the buckles from the webbing.

12. Thread the RAW/CUT end of the Rear Mounting straps around each Frame Down tube and through the Rectangle Buckles, pull tight. Be careful not to pinch any wires or hoses. Fig.11

Fig.11



Fig.12



13. Thread the RAW/CUT ends through the Keeper, and through the male buckles and clip to the Sloped Tank Mount. Fig.12

Attaching Rolie Bag.

15. Place the Rolie bag on the mount with Handle towards the front of the bike. Fig.15

Fig.15



16. Thread the Webbing from the Rolie Bag to the Rectangle Buckle on the Mount. Thread from inside to out side. Fig16. & Fig.17.

Fig.16



Fig.17



17. Repeat for the other side.

18. Tighten down all Mounting straps on the Mount to the Tank and the Bag to the Mount.

19. You can cut your webbing to the correct size as it is replaceable, remember to leave a bit so you can grab it.

****HINT*********

For Best Results use the Ratchet Method of Tightening webbing.

Most of us just grab and pull webbing to tighten it. Well there is an easier way.

1. Pull Up on the loose end of webbing lifting the buckle while pushing on the webbing before the buckle.

Fig.1



Fig.2



2. Bring the loose end down tightening as you go. Fig.2

3. Do this until the bag is very snug.

5. When you are done your bag should look like Fig. 1 on Page 1.

****Note If you have a Kawasaki KLR 650 we have Front Harness kits for Both Models.*********

If you have any questions or need assistance please call us at: 800/535-8131

Or email us at info@wolfmanluggage.com

Happy Riding.